

How to find the Machine Number?

Choose your machine model...

Model no: NV950/NV980K/NV985D.....	2
Model no: NV1250D/NV1250	3
Model no: NV4000	4
Model no: NV750E	4
Model no: NV1E	5
Model no: NV2600	5
Model no: NV2700	6
Model no: M370/ M380D	6
Model no: VR.....	7
Model no: V3.....	8
Model no: V7	8
Model No: NV180/NV180K	9

Model no: NV950/NV980K/NV985D

1 Turn on the sewing machine.





▶ The LCD comes on.

2 Press (Settings key) on the display panel.






▶ The setting screen appears.

3 Press the item to be set.

Switch the screen using  (Previous page key) and  (Next page key).

- The following screens show their default settings.

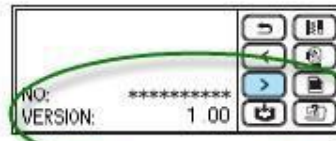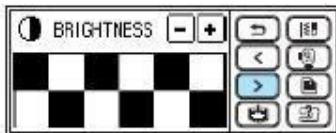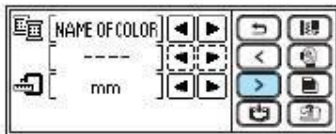

Example: Changing the needle stop position



4 When settings are complete, press (Back key).



▶ The initial stitch screen appears again.

Memo


- *NO* is the individual number for the sewing machine.
- *VERSION* is the program version which is installed in the sewing machine.
- Settings that are changed are saved even if the power is turned off.


Model no: NV1250D/NV1250

- 1 Turn on the sewing machine.

 



▶ The LCD comes on.

- 2 Press  (Settings key) on the operation panel.

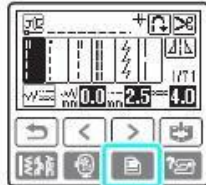


▶ The settings screen appears.

- 3 Press the item to be set.
Switch screens using  (Previous page key) and  (Next page key).




- The items shown in reverse highlighting are the settings at the time of purchase.

- Example: Changing the needle stop position

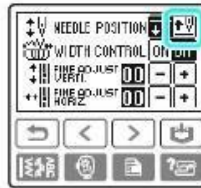

Model no: NV4000

Press the  button of the operation panel and refer the P.3




Model no: NV750E

Press the  button of the operation panel.



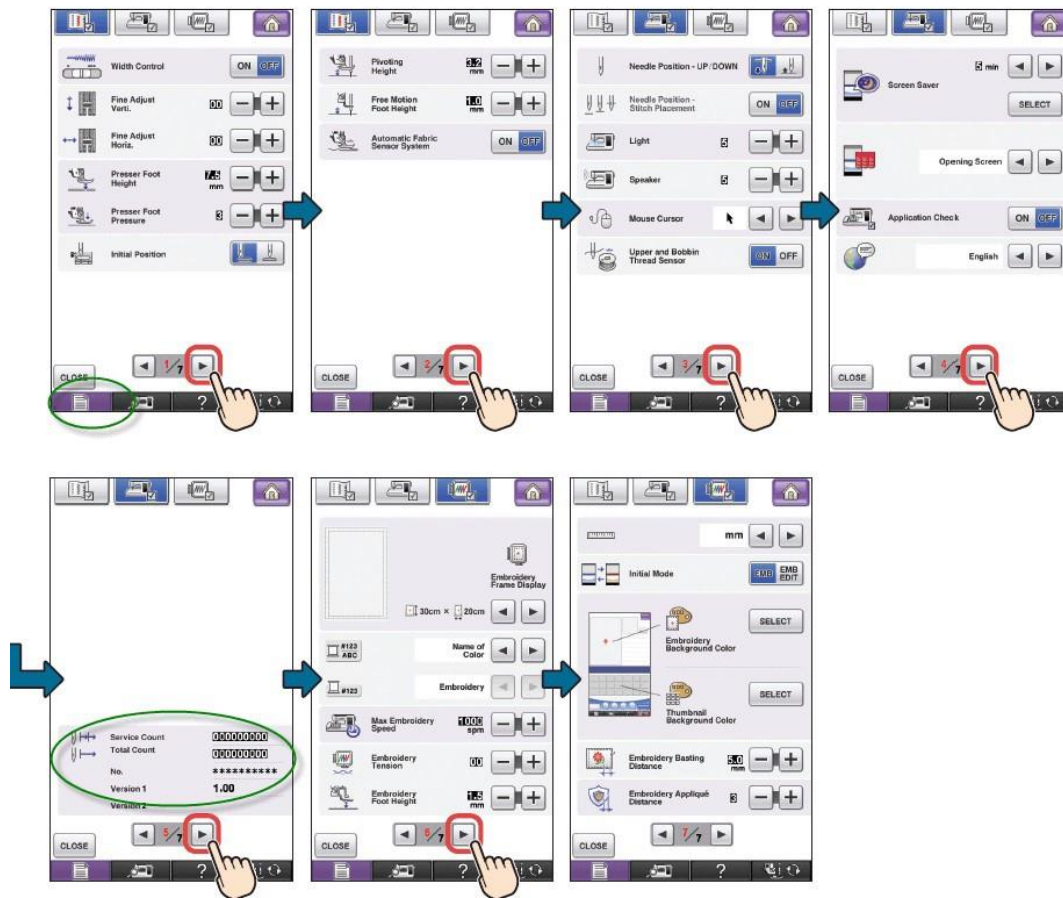


Model no: NV1E



Model no: NV2600



NV2600

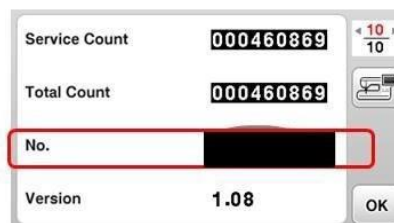
1. Turn on the machine.
2. Press Manual Icon on the bottom right corner.

3. Press the Right arrow to navigate until page 10.

4. Write down the No. shown on the display.



Model no: NV2700

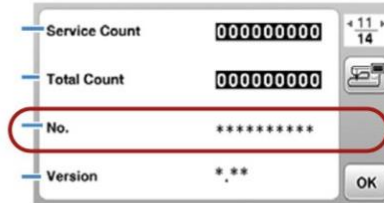

NV2700


1. Turn on the machine
2. Press Manual icon on the bottom right corner.
Settings key 
3. Press the right arrow to navigate until page 11.
Next page key 
4. Write down the no. shown on the display.



Model no: M370/ M380D

M370/ M380D

1. Turn on the machine
2. Press Manual Icon on the bottom right corner.
Settings key 
3. Press the right arrow to navigate until page 8.
Next page key 
4. Write down the no. shown on the display.

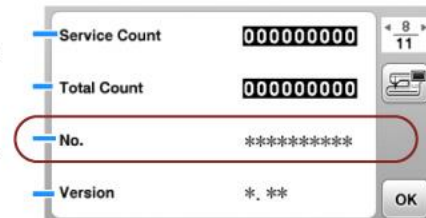
 
 


Model no: PR1000



Model no: VR

Touch  (settings key)

There are four pages in the settings screen. Touch  and  in the lower-center of the screen until the desired page is displayed. The  key appears on all pages.

 

■ Page 4




- ⑭ Light
The light can be set to be turned either on or off. (Refer to page 14 or 149.)
 - ⑮ Change the screen display brightness (Refer to page 149).
 - ⑯ Turn on or off the LED pointer light (Refer to page 40).
 - ⑰ The Total Count counter shows the total number of stitches sewn, and the Service Count counter shows the number of stitches that have been sewn since the machine's last maintenance.
 - ⑱ The Total Time counter shows the total amount of time that the machine has been used, and the Trip Time counter shows the amount of time that the machine has been used since its last maintenance.
- Use counters ⑰ and ⑱ as a standard for performing periodic maintenance and for receiving maintenance for the machine.
- ⑲ The "No. ##" is the number for the embroidery machine.
 - ⑳ Version
Shows the version of the software installed on this embroidery machine. (Refer to page 184.)

Model no: V3



V3

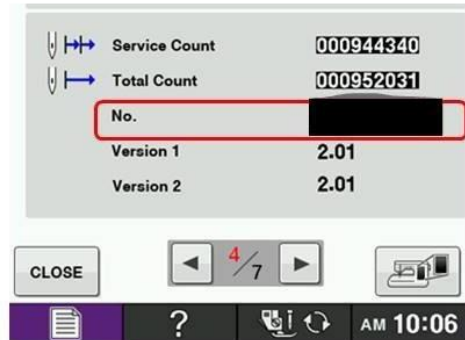1. Turn on the machine.
2. Press Manual Icon on the bottom left corner.

3. Press Right arrow at the bottom until page 4.

4. Write down the No. shown on the display.



Model no: V7

V7

1. Turn on the machine.
2. Press Manual Icon on the bottom left corner.

3. Press Right arrow at the bottom until page 7.

4. Write down the No. shown on the display.




Model No: NV180/NV180K

Settings screen

Press  and then move the arrow  to row 22 to check the machine No.

■ General settings

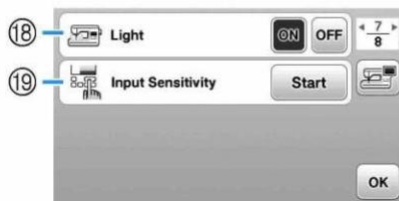

㉒ The [No.] is the internal machine number for your machine.