
kids' winter accessory instructions &

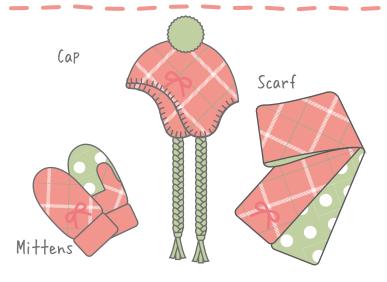

Materials

Top fabric IIO cm × 80 cm ×1

Other fabric IIO cm × 30 cm ×1

Rib knit fabric I6 cm wide, 40 cm long ×1

Yarn (medium weight) I skein of about 50 g

We recommend using fleece!


It is much easier to cut and sew. &

Finished size


(For a child 90 to 100 cm tall) Cap: 52 cm head circumference

Mittens: About 15 cm long, about 9 cm wide,

about 15 cm wrist circumference Scarf: 13 cm wide, 105 cm long

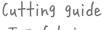


(wrong side)

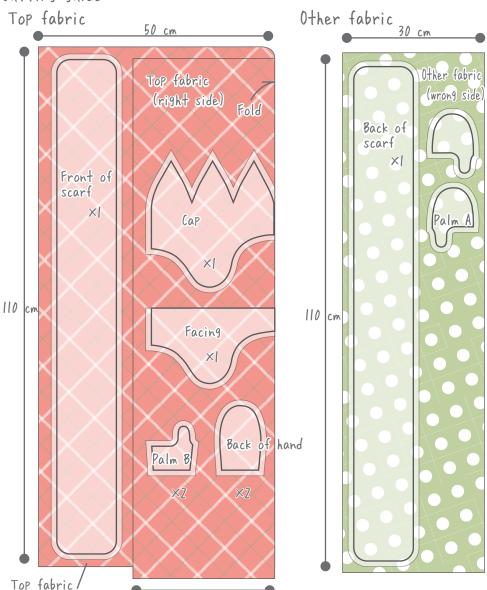

30 cm

Note) Fold only this part in half.

Rib knit fabric

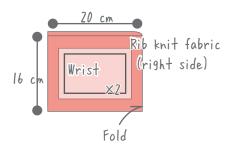

Note) Cut out Palm A,
flip over the Pattern,
and then cut it out again!

When cutting out Pieces along the fold in the top fabric and rib knit fabric, fold the fabric right side out.

For marking the fabric, it would be easier if transfer paper was placed between the two layers. Since Pieces are sewn with right sides together, it is easier to sew when the markings are on the wrong side of the fabric!

Copyright© Brother Sales, Ltd. All Rights Reserved.

Cap instructions

* Step 1

Make the cap.

① With right sides together, sew each of the five darts on the cap to the one beside it, in order.

Press the seams, and then Press open the seam allowances.

Note

- · Sew reverse stitches at the beginning and end of stitching.
- With right sides together, sew along the back centerline of the cap.
 Press the seam, press open the seam allowances,

and then turn right side out.

Note

- · Sew reverse stitches at the beginning and end of stitching.
- At this stage, fabric such as fleece, whose seam allowance edges do not fray, can remain unfinished; however, for fabric that does fray, finish the edges of the seam allowances with overlock or zigzag stitching.

* Step 2

Make the facing.

allowances.

① With right sides together, sew along the back centerline of the cap.

Press the seam, and then press open the seam


Note

- · Sew reverse stitches at the beginning and end of stitching.
- At this stage, fabric such as fleece, whose seam allowance edges do not fray, can remain unfinished; however, for fabric that does fray, finish the edges of the seam allowances with overlock or zigzag stitching.

* Step 3

Make the braids.

① Cut 60 strands of yarn, each 50 cm long. Braid together three bundles of 10 strands. Do this twice.

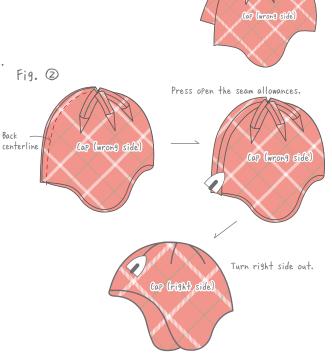

4th

Cap (right side)

3rd


2nd


Fig. (D

5th

Press open the seam

allowances of the darts.

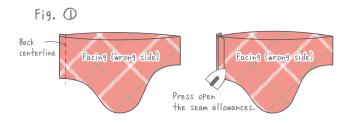

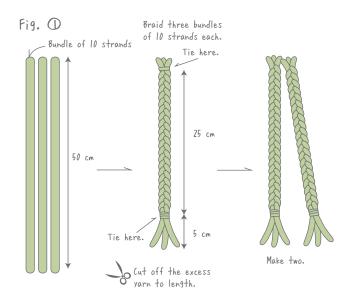

* Step 4

Attache the facing.

1 Baste the braid in the seam allowance of the cap. Do this on the left and on the right.

Note

- · Sew reverse stitches at the beginning and end of stitching.
- 2 With right sides together, sew the facing to the cap, along the edge. Press the seams, turn right side out, and then touch up with an iron.

- · Sew reverse stitches at the beginning and end of stitching.
- 3 Sew blanket stitching. Follow the instructions below to sew blanket stitching with yarn along the edge of the cap.




- This stitch is sewn with the thread connecting points I and I held back at point 3.
- You can use any stitch length, but we recommend I cm. w Use a yarn needle to sew the blanket stitching.

* Step 5

Finishing

1 Make the pompom.

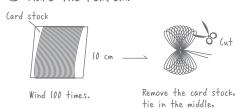

2 Attach the pompon at the center of the cap and reshape it. You are now finished!!

and then cut the loops on both ends.


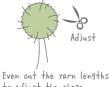


Fig. (1)

Cap (right side)

to adjust the shape.



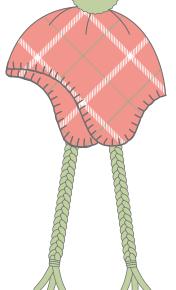

The cap from these winter accessories is finished!

Fig. 2 Cap (right side) Cap (right sid Fig. 3

Mittens instructions

* Step 1

Make the Palm.

① With right sides together, sew Palm A and Palm B. Press the seam,

press open the seam allowances, and then turn right side out.

Do this for the left and for the right.

Note

- · Sew reverse stitches at the beginning and end of stitching.
- At this stage, fabric such as fleece, whose seam allowance edges do not fray, can remain unfinished; however, for fabric that does fray, finish the edges of the seam allowances with overlock or zigzag stitching.

* Step 2

Make the mitten part.

① With right sides together, sew the Palm and back of hand.

Press the seam, and then Press open the seam allowances.

Note

· Sew reverse stitches at the beginning and end of stitching.

* Step 3

Attach the wrist.

① With right sides together, sew the side seam.


Press open the seam allowances, and then fold in half lengthwise to turn right side out.


Note

- · Sew reverse stitches at the beginning and end of stitching.
- With right sides together, sew the wrist to the mitten, along the edge. Finish the edges of the seam allowances for the three layers with overlock or zigzag stitching. Do this for the left and for the right.

Note

- · Sew reverse stitches at the beginning and end of stitching.
- 3 Touch up with an iron, and you are finished!!

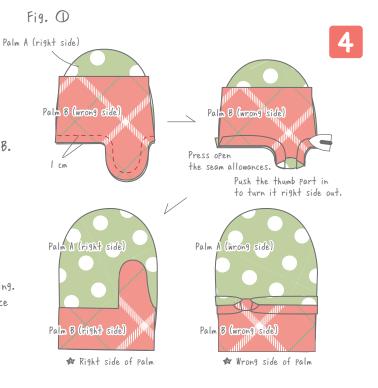

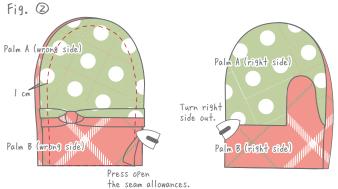

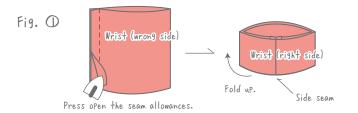


Fig. 2



The mittens from de these winter accessories are finished!!

Scarf instructions

* Step 1

Sew together.

① With right sides together, sew the front to the back, along the edge.

At this stage, leave an opening of about 10 cm. Press the seams, and then turn right side out.

Note

- · Sew reverse stitches at the beginning and end of stitching.
- ② Stitch along the edge.

 (Close the opening with the stitching.)

 Touch up with an iron, and you are finished!!

Note

· Sew reverse stitches at the beginning and end of stitching.

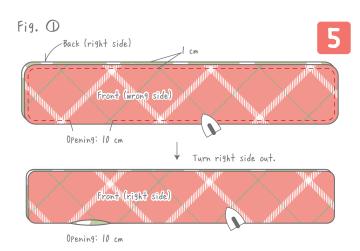


Fig. 2




The scarf from these winter accessories is finished!!



Alteration * tip

Before cutting out the Pieces, roughly cut the fabric and sew embroidery to add originality to your fashion!

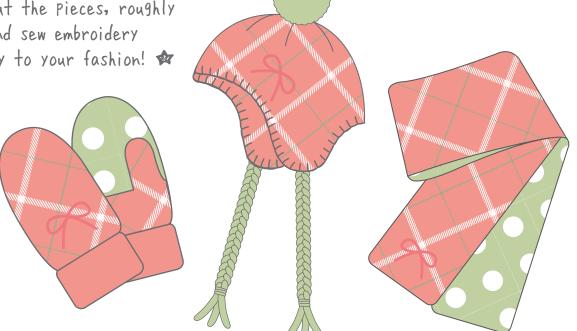

Copyright© Brother Sales, Ltd. All Rights Reserved.